## Care-Ware Bedside Patient Care Units

Division of Acorn Engineering Company



A MEMBER OF MORRIS GROUP



(formerly referred to as Swivette)

**Care Unit** 

Includes Models **4030, 4032, 4035** 



Fixture May Show Some Available Options

**Cabinet** interior surfaces are stainless steel. Interior has a removable stainless steel floor to conceal frame anchors. Specify cabinet material and color selection.

**Counter** has a 3" backsplash and a bullnose front edge. Specify countertop material and color selection

**Lavatory** is always located on the opposite side of the toilet.

**Toilet** is stainless steel, siphon jet type with white plastic seat and self-sustaining check hinge. Door linkage swivels the toilet into the room when cabinet door is opened. The toilet is locked in place when open and must be unlatched to close.

**Hydraulic Flush Valve** is furnished standard with a 1-3/4" diameter, hydraulically actuated, remote pushbutton. Minimum required flow pressure is 25 PSI with a minimum water consumption of 1.28 GPF.

**Swivel Assembly** is cast iron with a sanitary white powder coat finish, and has a positive watertight, chemical-resistant seal. Swivel assembly requires floor anchoring (hardware provided). **Toilets will withstand a 2,500 pound static vertical load.** 

**Floor Anchors** are seismic rated for CBC category IV structures.

**Metal Template** is provided for ease of installation.

Bedpan Washer Cabinet mounts on toilet side of cabinet and includes a handheld bedpan washer with volume control, positive shut-off and stainless steel hose. An elevated pressure type vacuum breaker by others is recommended with this feature to prevent back-siphonage or backflow occurring and possibly contaminating the water supply. Consult local codes and ordinances for requirements. Optional -BWD Bed Pan Washer Drain is recommended.

## **GUIDE SPECIFICATION**

Provide and install Whitehall Free-Standing Bedside Patient Care Unit (specify model number and options). Cabinet frame shall be heliarc welded, type 304 stainless steel, and shall not require wall support. Door on toilet side shall be linked to toilet, so that when door is opened or closed, the toilet will swivel accordingly. Door on lavatory side shall be provided with a toilet paper holder. Doors shall support a 250 pound static, vertical load. Front panel shall hinge open for access to valves and piping. Storage compartment shall be provided above the toilet. Concealed bedpan washer cabinet mounts on toilet side of cabinet and includes a handheld bedpan washer with volume control, positive shut-off and stainless steel hose. Cabinet shall provide front toe space. Lavy P-trap shall be furnished. Toilet shall be stainless steel, elongated, siphon jet type, and shall flush in any position along the arc of movement. Trap shall pass a 2-1/8" ball. Toilet shall withstand loadings of 2,500 pounds without permanent damage. Toilet seat shall have self-sustaining check hinge.

Please visit www.whitehallmfg.com for most current specifications.








Complies with the following standards:






Whitehall Mfg. • P.O. Box 3527 • City of Industry, CA 91744 • (800) 782-7706 • (626) 968-6681 • Fax (626) 855-4862

## Care-Ware® Bedside Patient Care Units

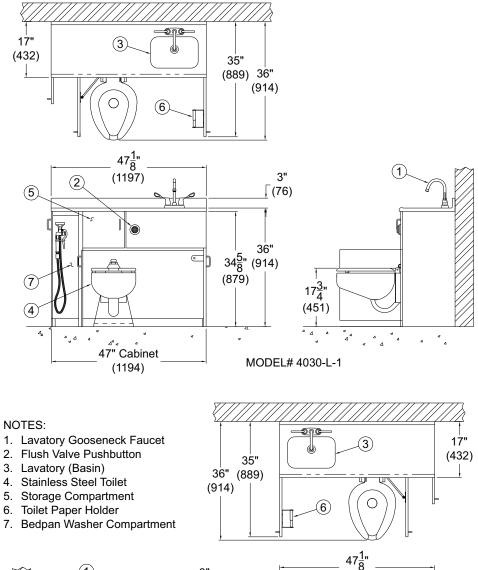

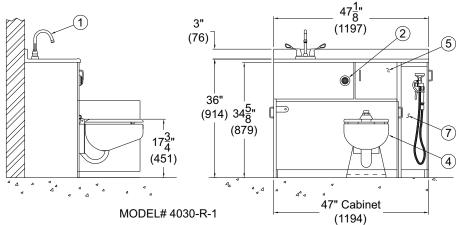

All dimensions are nominal and subject to manufacturer's change without notice. Whitehall assumes no responsibility for use of void or suspended data © Whitehall Manufacturing, Member of Morris Group International. Please visit **www.whitehallmfg.com** for most current specifications.

Whitehall Mfg. • P.O. Box 3527 • City of Industry, CA 91744 • (800) 782-7706 • (626) 968-6681 • Fax (626) 855-4862

## Care-Ware® Bedside Patient Care Units

MODEL NUMBER AND OPTIONS SELECTION		TTOP COLOR SELECTION (Must Specify)
BASE MODEL NUMBER (Must Specify)	-CCL	Corterra® Solid Surface Countertop w/ Integral
☐ 4030 Free-Standing, Back Wall Waste Outlet		Backsplash & Lavy (Basin) Color:
☐ 4032 Free-Standing, Side Wall Waste Outlet		(Refer to www.whitehallmfg.com for available colors,
☐ 4035 Free-Standing, Floor Waste Outlet		keyword search: CORTERRA)
<b>Note:</b> Side wall outlet is only available on the toilet side of	l <sub>P</sub>	☐ AMA SteriTouch® Anti-Microbial Additive
fixture.	P □ -CCT	Corterra® Solid Surface Countertop w/ Integral
	<b>_</b> 55.	Backsplash
TOILET ORIENTATION (Must Specify)		Color:
☐ -L Left Hand Toilet ☐ -R Right Hand Toilet		(Refer to www.whitehallmfg.com for available colors,
<b>Notes:</b> L (Left) or R (Right) indicates toilet location in opened	_	keyword search: CORTERRA)
position when facing the fixture. Lavy (Basin) is always located	l <sub>P</sub>	☐ AMA SteriTouch®Anti-Microbial Additive
on side opposite the toilet.		Corian® Countertop
BACKSPLASH/CABINET ORIENTATION (Must Specify)	* 🔲 -CNCTL	Corian® Countertop w/ Integral Contrasting Colored
□ -1 Back Wall Only (One Wall)		Lavy Bowl (Basin)
-2 Right Hand Corner (Two Wall)	-CS	Stainless Steel Countertop w/ Integral Backsplash
☐ -3 Left Hand Corner (Two Wall)		& Lavy (Basin)
-4 Alcove (Three Wall)	-OCR	Cast Translucent Resin Countertop w/ Integral
		Backsplash and Solid Surface Lavy Bowl (Basin)
FLUSH VALVE SELECTION (Must Specify)		Color:(Refer to www.whitehallmfg.com for available colors,
☐ -HET - 1.28 GPF		keyword search: RESIN)
ULF - 1.6 GPF (Standard)		AMA SteriTouch® Anti-Microbial Additive
□ -3.5 GPF	☐ -LCT	Less Countertop
FAUCET SELECTION (Must Specify)	-LTC	High Pressure Laminate
☐ -CSG Centerset Gooseneck Spout w/ Wrist Blade Handles		Specify Laminate Manufacturer
☐ -SO Sensor Operated Valve		Color:
-SO-BAT Sensor Operated Valve-Battery Powered		
U -VF H & C Foot Pedal Operated Air-Control Valve		COLOR SELECTION (Must Specify)
LFN Laminar Flow Nozzle	- OCP	Color Polyethylene Panels
☐ -LS Lavatory Hose Spray (Not Available w/ -SO)		Color:
LAVY (BASIN) OPTIONS		(Refer to <a href="www.whitehallmfg.com">www.whitehallmfg.com</a> for available colors, keyword search: POLYETHYLENE)
☐ -ESB Embedded Stainless Steel Basin (With -CCT Only)	-LCC	High Pressure Laminate
☐ -FIB Factory Installed Stainless Steel Basin		Specify Laminate Manufacturer
STORAGE COMPARTMENT/BEDPAN WASHER/DIALYSIS BOX		Color:
☐ -DB1 Hemo-Dialysis Box, Single Valve- PVC Ball Valve	TOT! FT 0	
☐ -DB1SV Hemo-Dialysis Box, Single Valve- S/S Ball Valve w/	TOILET O	
T-Handle	P☐-BL ☐-FCI	Bedpan Lugs Infectious Control Flush
☐ -DB2 Hemo-Dialysis Box, Dual Valve- PVC Ball Valves	☐ -MO3	3" P-Trap (3.5 GPF Only)
☐ -DB2SV Hemo-Dialysis Box, Dual Valve- S/S Ball Valves w/	_	
T-Handle		OPTIONS
☐ -SS Storage Shelf	🔲 -BWD	Bedpan Washer Drain
TOILET PAPER OPTIONS	D 50	(Not Available with Model 4032)
☐ -EP Exposed Paper Holder	-EC	Extended Countertop
-PHE Enclosed Paper Holder (Not Available w/ Stainless	-EG	Enviro-Glaze (Powder Coat):
Steel or Corian® Basin)		Specify Color: Cabinet Interior
		☐ Lavy (Basin) ☐ Cabinet Interior ☐ Toilet Exterior Only
	□ -SHG	Swing Up Grab Bar
	_ 300	oning op Grab bar
		<b>5</b>
	Ip Infection Prevention option	
	t Ingragged load time and price	
	* Increase	ed lead time and price
▲ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov		
All dimensions are nominal and subject to manufacturer's change without notice.  SELECTION SUMMARY & APPROVAL FOR MANUFACTURING		
Whitehall assumes no responsibility fo use of		
void or superseded data © Whitehall Model Number & Options		
Manufacturing, Member of Morris Group Company		
International. Please visit www.whitehallmfg.com for Contact		Title
most current specifications.  Approval for Manufacturing/Signature		

Whitehall Mfg. • P.O. Box 3527 • City of Industry, CA 91744 • (800) 782-7706 • (626) 968-6681 • Fax (626) 855-4862